
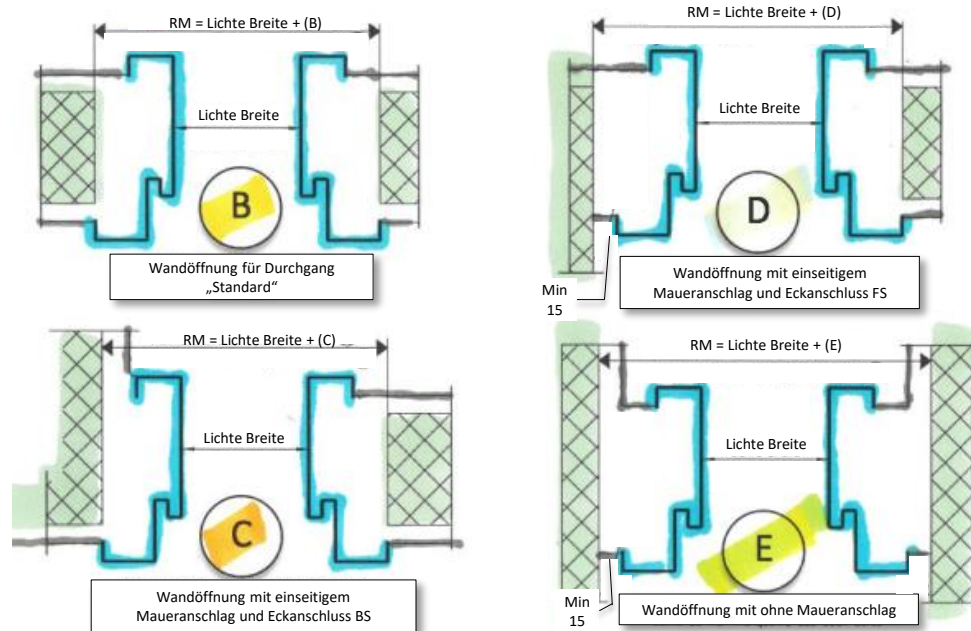


# Grundbegriffe

## Einbausituationen

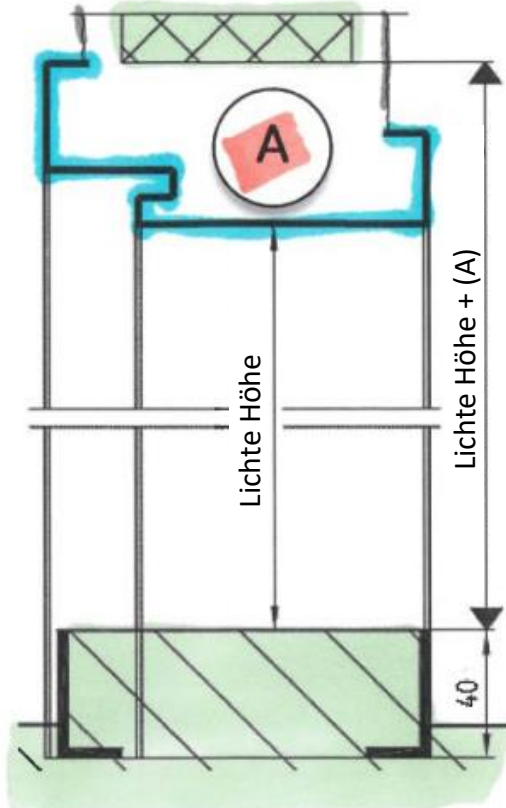

Zargentyp	A		B		C		D		E	
	min	max	min	max	min	max	min	max	min	max
UD   UDS	40	55	80	105	80	105	110	135	135	160
C.U	40	55	80	105	80	105	85	110	90	115
E.D   E.DS	40	55	80	105	80	105	110	135	-	-
W.UD   W.UDS	60	75	120	145	120	145	150	175	140	165
N.UD   N.UDS	50	65	100	125	100	125	130	155	160	185
NW.UD   NW.UDS	70	85	140	165	140	165	130	155	160	185
UDD   UDDS	60	75	120	145	120	145	150	175	170	195
ST.UD   ST.UDS	30	45	60	85	-	-	-	-	-	-
ST6.UD   ST6.UDS	30	45	60	85	-	-	-	-	-	-
ST7.UD   ST7.UDS	50	65	100	125	-	-	-	-	-	-
ST1.UD   ST1.UDS	35	50	70	95	-	-	-	-	-	-
O.UDS	45	60	90	115	90	115	-	-	-	-
O.UDS.LBW	54	-	107	-	-	-	-	-	-	-
T.UD	80	95	160	185	160	185	-	-	-	-
T.UDS	70	85	145	170	145	170	-	-	-	-